


# Kiosks

# Graphic Holders specific to configuration

Grid Kiosk

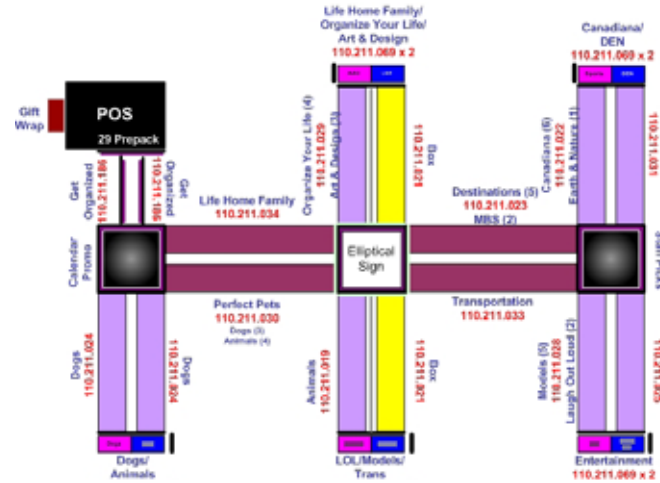

**Sign Holder for Grid Category with Ratchet Base**  
P/N 110.205.013



Each sign holder for grid category with ratchet base (110.205.013) will be installed at the centre top of the 5ft & 4ft grid shelf sections between the two top shelves. Refer to your planogram for exact placement.

**Sign Holder for Bin 9.5x3**  
P/N 110.205.010




Used on 12" and 14" bins and on the Giftwrap bin. See planogram for exact placement

**Elliptical Sign Holder**  
P/N 110.205.042



Gunmetal Kiosk

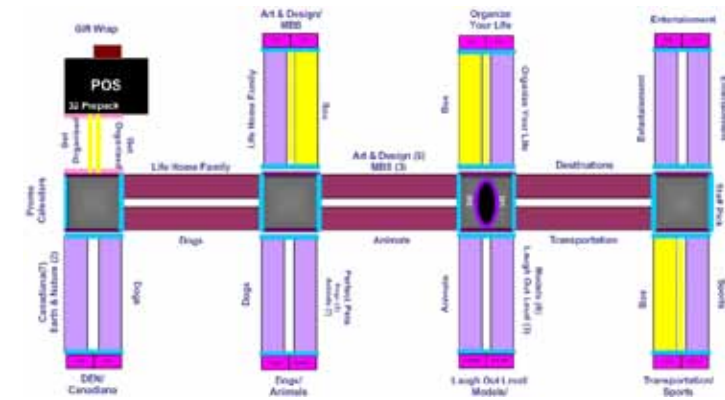

**Sign Holder for Gunmetal Category with Grip Base**  
P/N 110.205.014



Each sign holder for gunmetal category with grip base (110.205.014) will be installed at the centre top of the gunmetal wall and box sections. Refer to your planogram for exact placement.

**Sign Holder for Bin 9.5x3**  
P/N 110.205.010




Used on 12" and 14" bins and on the GW bin. See planogram for exact placement

**Elliptical Sign Holder**  
P/N 110.205.042



CC Plus Kiosk

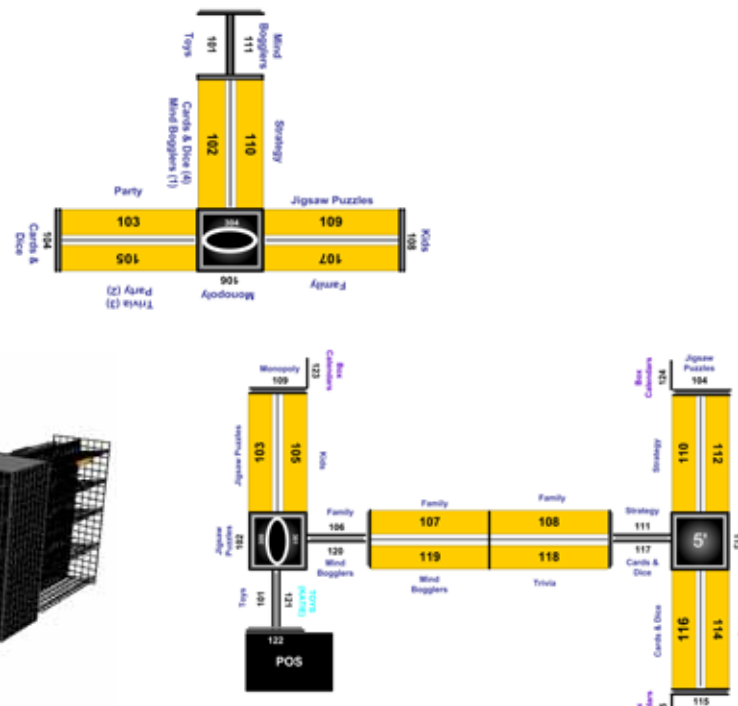

**Acrylic Sign Holder/Shelf Talker**  
P/N 110.205.206




Typically, each shelf talker should be installed at the front of the top shelf in it's section. In some cases there are sections with two categories of games that will require more than one shelf talker. In these cases, refer to your Plan-o-gram for exact placement.

**Elliptical Sign Holder**  
P/N 110.205.042



**Please Note:** The CC Plus kiosks **WILL NOT** be receiving an Elliptical Sign Holder. In your graphic kit you will receive a combined Calendar Club + Games graphic. This must be placed on the centre tower of the combined kiosk.

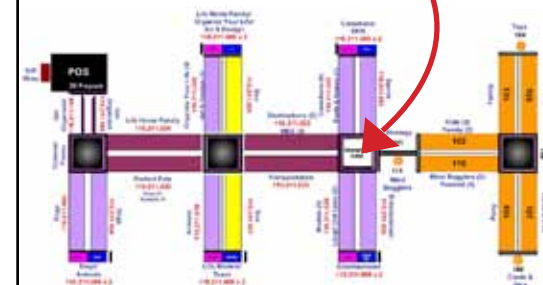

# Graphic Holders

# Installation Instructions



**1** Horizontal Side Facing Out. Place the Category Holder on this piece.

Note: Make sure that the grid is set-up so that the straight part of the holder is between the two pieces of grid. To do this, the horizontal bar must be facing out on at least one side.

**2** Line the category holder up to be centred over the grid shelf. Match the rounded side of the gripper with the side of the grid where the bars are horizontal. Start with one end of the gripper and push the gripper onto the grid.

**3** Once the corner is on, push down the rest of the holder until it is secure around the horizontal bar.

**4** Place the category header (24x6) into the holder by starting at one end and sliding the graphic across the front of the holder. Repeat on the other side. Repeat these steps for all the category headers.

Using the ratchet mechanism, you can adjust the angle of the sign holder so that it is at right angles to the top and face of the shelves.



**1** In the centre of the wall or box section, slide the graphic holder over one side of the gun metal top bar.

**2** Place the category header (24x6) into the holder by starting at one end and sliding the graphic across the front of the holder. Repeat on the other side.




**1** Slide the graphic into the groove that is on the back of the holder.

**2** Line the category holder up to be centered over the grid shelf.

**3** Start with one end of the shelf talker and push the gripper onto the grid.

**4** Once the corner is on, push down the rest of the holder until it is secure around the horizontal bar. Push the top flat part down so that the frame snaps in place.

The fit tension on these sign holders is tight and it may seem difficult to install, however they do clip on and the fit will loosen up with use.

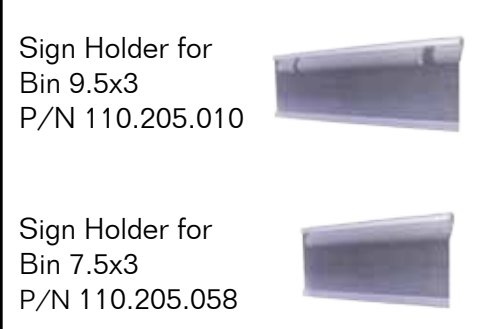

**1** Slide the Sign Holder for Bin 9.5x3 (110.205.010) over the opening on the front of the bin until it snaps into place.

**2** Once the Sign Holder for Bins is in place Slide the 9.5 x 3 graphic into the channel. Some bins will have the website graphic (featured above). Refer to your planogram for placement.

**3** **Mini Bins 7.5"x3" graphics** Slide the graphic holder over the opening on the front of the mini wrap bin until it snaps into place. Once the graphic holder is in place, slide the 7.5 x 3 graphic into the channel at the front.



**1** Your sign will arrive fully assembled. In your graphic kit, the following types of stores should have already received the following graphics:

**C-plus Game Wing** (in replacement of Calendar Club Graphics)

**Calendar Club**

**Game only**


**2** Slide the graphic into the extrusion starting on one side. Once it is in then slightly bend the graphic to slide the other side into the other extrusion.

**3** On the bottom of the frame you will notice a hole, use this to pinch the graphic to push up into the top frame and the edge into the bottom.

**4** Repeat steps 1 through 3 for the other side.





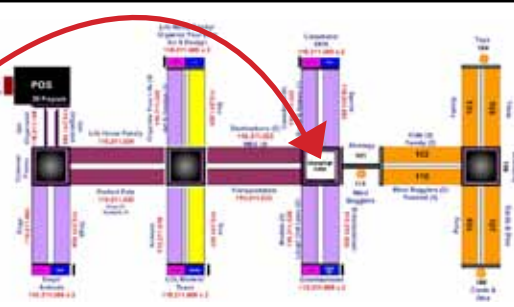





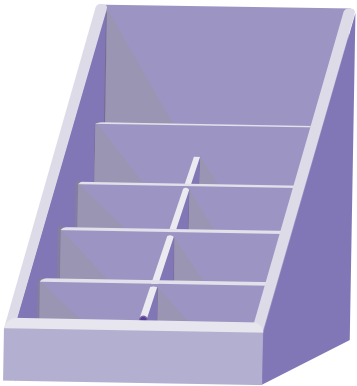


**5** The elliptical sign should be placed on the centre tower of your kiosk. Please see your floor plan if you have any questions.




**DO NOT tape the graphic to the frame. The graphic WILL fit, just take the time to make it work.**



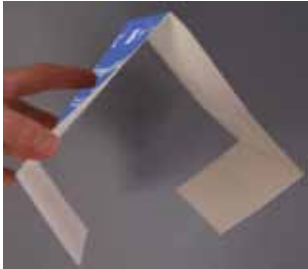




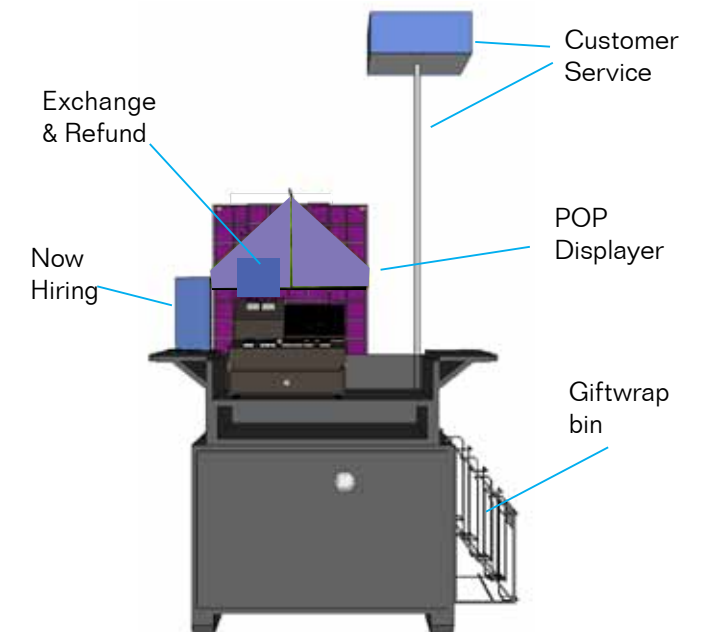


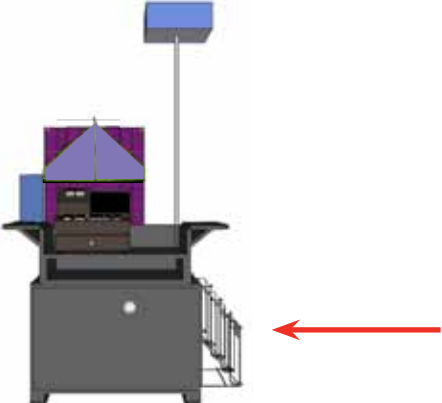



# POS Graphics

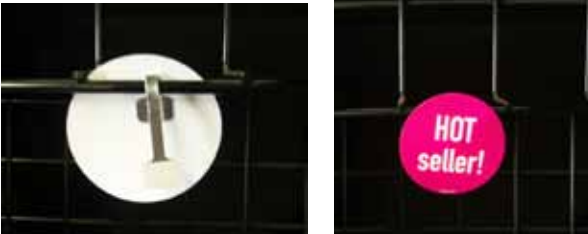	Graphic	Fixture	Instructions	
Customer Service		<p><b>P/N 110.205.015 POS Sign 4 Sided</b></p>  <p><b>P/N 108.212.001 Aluminium POS pole</b></p> 	<p>Assemble the 4 sided POS sign using the instructions in the box. Slide the pole into the base of the sign and into the interior sleeve. Place the sign pole into the holder at the side of a <b>Crate POS</b>.</p>	<p>Once the 4 Sided POS sign is set up. Slide the 16 x 5.875 graphic into the channel with the text "customer service" facing out.</p>  <p>Repeat this on all 4 sides.</p>
Now Hiring		<p><b>P/N 110.205.008 Sign Holder Acrylic for 8.5 x11</b></p> 	<p>Slide the Now Hiring graphic into the 8.5 x11 Acrylic Sign Holder.</p> 	<p>When required, place this graphic at the POS off to the side so that it is still visible but out of the way.</p>
Exchange & Refund		<p>No fixtures for this graphic.</p>	<p>Fold the Exchange &amp; Refund Policy tent card along the scored edges.</p> 	<p>Remove the backer on one of the sides that has two sided tape and attach the bottom pieces together.</p>  <p>Attach the Exchange &amp; Refund Policy tent card to the top of the cash register as shown by removing the backer from the 2nd piece of two sided tape.</p>
POP Displayer			<p>Each store will receive 2 displayers. Place them back to back on the shelf by the cash as shown to the right.</p>	<p>Refer to your planogram for product placement.</p>

## Sample Cash Desk Set-up



**Please DO NOT place credit/debit stickers on the POS, the payment logos are now included on the exchange & refund policy and the customer service graphic on the POS sign.**

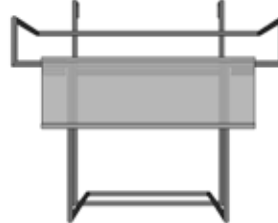	Graphic	Fixture	Instructions		
3" disks		<p><b>Wobbler</b> Wobblers will be included with the 3" disk to attach to grid and/or shelves.</p> 	<p>3" disks can be attached in the following ways:</p> <p><b>Hooked</b> Bend the wobbler in half so that none of it is showing from the top and slide the hooked part over the front of the shelf in front of the calendar or game.</p> 	<p><b>Twisted &amp; Hooked</b> When you want to place the disc beside the product you can attach it by bending the wobbler in half and then curling it along the verticle part of the grid. Try to place it so that the horizontal bar holds it in place.</p> 	<p><b>Adhesive</b> Where there is a solid shelf, you may need attach the wobbler with the adhesive strip. It can either be attached to the top or the bottom of the shelf. Fold the wobbler on a 90 degree angle and remove the adhesive backer and stick it to the top/bottom of the shelf. Some wobblers only have adhesive on one side. For this type you will need to twist the wobbler around until the adhesive is in the correct position to stick to the shelf.</p> <p><b>Bottom</b>  <b>Top</b> </p>
Gift wrap bin		<p><b>Sign Holder for Bin 9.5x3</b> <b>P/N 110.205.010</b></p> 	<p>Slide the graphic holder over the opening on the front of the gift wrap bin until it snaps into place.</p> 	<p>Once the graphic holder is in place, slide the 9.5 x 3 graphic into the channel at the front.</p> 	<p>Finished! Now hang the bin on the side of the cash desk</p> 
Mini wrap bin		<p><b>Sign Holder for mini bin talker</b> <b>7.5x3</b> <b>P/N 110.205.058</b></p> 	<p>Slide the graphic holder over the opening on the front of the mini wrap bin until it snaps into place.</p>  <p><b>Note: There are no graphics for mini calendars.</b></p>	<p>Once the graphic holder is in place, slide the 7.5 x 3 graphic into the channel at the front.</p> 